

## Atlantic Mains Borne Signalling

### Pass Programme System

#### **User Instructions**

This system uses the standard wiring of the heater to send the control signal from the programmer (Chronopass) to the heaters in the selected zone. It gives complete flexibility in setting up heating zones. Typically a dwelling will be divided into two zones, day rooms and bedrooms. Only one Chronopass in each should be used. Bathrooms are usually switched independently, not conforming to any particular pattern of use.

**Setting up a zone.** Every heater in the zone must be fitted with an interface (code 602211). They are attached at the top right hand back of the heater just below the thermostat dials. Make sure that the power to the heater is switched on and that no Chronopass is fitted to an interface.

1. On one of the heaters press the button on the interface. It is a translucent rectangular shape above the Chronopass aperture. An indicator light will be seen flashing slowly.
2. Press the same button again and the light will flash quickly.
3. Repeat 1. and 2. on the other heaters required to be in the zone.
4. Return to the original heater and press the button again. The zone has now been created and the lights will stop flashing.
5. Programme the Chronopass for the zone as required and insert into the interface on any one of the selected heaters.
6. Repeat the same procedure for the other zones.

Zones may be redefined, if required, by using the same procedure. In each case a unique electronic code is given to the zone to ensure that there is no switching interference between zones.