


Wiring Schematic for Atlantic F17 panel heaters

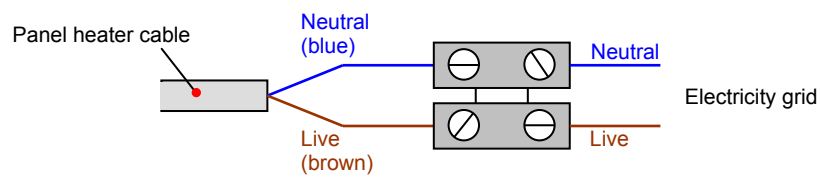

Essential Notes to be read before starting installation:

- ❑ The panel heater must be powered with 220-240V 50Hz.
- ❑ The panel heater must be connected to the mains through an adjacent spur.
- ❑ The installation must be equipped with an omnipole disconnection mechanism with a break contact distance of at least 3mm.
- ❑ **Earthing is prohibited.**
- ❑ The heater must be installed by a qualified electrician in accordance with IEE Regulations 17th edition.