


## Wiring Schematic for Atlantic Heaters with Pilot Wire and External Control

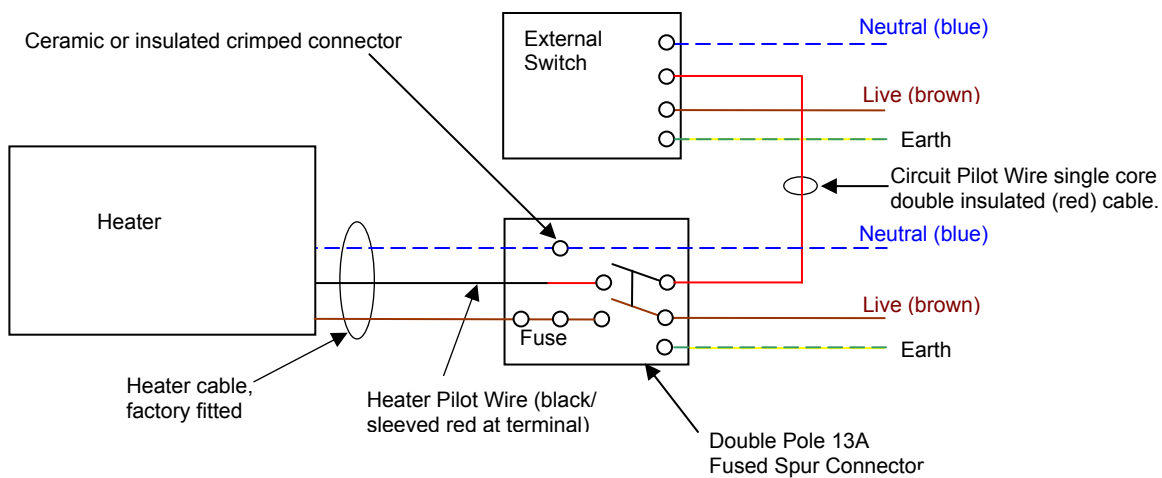

### Essential Notes to be read before starting installation:

The pilot wire signal is 240V ON/OFF, 10mA/heater. The external switch terminal for the pilot wire supply to the heater must be Normally Closed (NC). This holds the heater at set back. When the switch is activated the signal is switched OFF, with the NC terminal becoming volt free, and the heater reverts to Comfort temperature range. For the switch to function the Live (L) and the Common (COM) terminals on its reverse side must be connected together by a bridging wire.